

User Manual

P Line Outdoor HMI with Capacitive Glass Touch

Part Number:	80860.812
Version:	2
Date:	2014-08-08
Valid for:	TPE057ZCV TPE070ZCW

Version	Date	Modifications
1	2012-12-14	First Edition
2	2014-08-08	Side View, Mounting Depth and UL Approval

This manual, including all illustrations contained herein, is copyright protected. Use of this manual by any third party in departure from the copyright provision is forbidden. No part of this manual may be reproduced, translated or electronically or photographically archived or altered without the express written consent from Sutron electronic GmbH. Violations shall be cause for damage liability.

Sutron electronic reserves the right to make any changes that contribute to technical improvement.

Overall Table of Contents

1	Important Notes	5
1.1	Symbols	5
1.2	Safety Notes	5
1.3	Intended Use.....	6
1.4	Target Group.....	6
2	Installation and Commissioning	7
2.1	Unpacking the Device	7
2.2	Mounting the Device	7
2.2.1	Front Panel Dimensions	8
2.2.1.1	TPE057ZCV.....	8
2.2.1.2	TPE070ZCW.....	9
2.2.2	Mounting Cutout	10
2.2.2.1	TPE057ZCV.....	10
2.2.2.2	TPE070ZCW.....	11
2.2.3	Side View, Mounting Depth	12
2.2.3.1	TPE057ZCV.....	12
2.2.3.2	TPE070ZCW.....	13
2.3	Connecting the Device.....	14
2.3.1	Supply Voltage.....	14
2.3.2	Grounding	15
2.4	Switching On.....	16
2.4.1	Cockpit.....	16
2.4.1.1	Menu Structure	17
2.4.1.2	Settings and Functions	18
2.4.1.2.1	Language Selection.....	18
2.4.1.2.2	Date and Time.....	18
2.4.1.2.3	Administration.....	18
2.4.1.2.4	Network	18
2.4.1.2.5	Password.....	19
2.4.1.2.6	Display.....	19
2.4.1.2.7	Write Filter	20
2.5	Identification.....	22
3	Control and Display Elements	23
3.1	Display	23
3.1.1	Touchscreen	23
4	Interfaces of the Device	25
4.1	Ethernet	26
4.1.1	Pin Assignment.....	26
4.1.2	Cable	26
4.1.3	Diagnosis	27

4.2	USB	27
4.2.1	Cable	27
4.3	Serial Interfaces	28
4.3.1	RS-422 / RS-485 (X14)	29
4.3.1.1	Pin Assignment	29
4.3.1.2	Termination	30
4.3.1.3	Transmitter Control	31
4.3.1.4	Diagnosis	31
4.3.2	RS232 (X15)	32
4.3.2.1	Pin Assignment	32
4.3.2.2	Diagnosis	33
4.4	Field Bus Interfaces	34
4.4.1	CAN (X12, X13)	34
4.4.1.1	Pin Assignment	35
4.4.1.2	Cable	36
4.4.1.3	Termination	36
4.4.1.4	Diagnosis	36
4.5	Memory Card	37
4.5.1	Inserting the memory card	37
4.5.2	Ejecting the memory card	37
4.6	Shielding D-SUB Connectors	38
5	Maintenance and Servicing	39
5.1	Maintenance Interval	39
5.2	Front Panel	39
5.3	Fuse	39
5.4	Battery	39
5.4.1	Changing the Battery	40
5.4.2	Battery Disposal	41
6	Technical Data	43
6.1	Allgemein	43
6.2	TPE057ZCV	46
6.3	TPE070ZCW	47
7	Ordering Data	49
A	Index	51

1 Important Notes

1.1 Symbols

The symbols in this manual are used to draw your attention on notes and dangers.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

**DANGER**

This indicates a hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING**

This indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION**

This indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

**NOTICE**

This symbol together with the signal word NOTE and the accompanying text alert the reader to a situation which may cause damage or malfunction to the device, hardware/software, or surrounding property.



This symbol and the accompanying text provide the reader with additional information or refer to detailed sources of information.

1.2 Safety Notes

- Read this manual carefully before using the operating device. Keep this manual in a place where it is always accessible to all users.
- Proper transportation, handling and storage, placement and installation of this product are prerequisites for its subsequent flawless and safe operation.
- This user manual contains the most important information for the safe operation of the device.
- The user manual, in particular the safety notes, must be observed by all personnel working with the device.
- Observe the accident prevention rules and regulations that apply to the operating site.
- Installation and operation must only be carried out by qualified and trained personnel.

1.3 Intended Use

- The device is designed for use in the industry.
- The device is state-of-the art and has been built to the latest standard safety requirements. However, dangerous situations or damage to the machine itself or other property can arise from the use of this device.
- The device fulfills the requirements of the EMC directives and harmonized European standards. Any modifications to the system can influence the EMC behavior.

1.4 Target Group

The use of products described in this manual is oriented exclusively to:

- Qualified electricians or persons instructed by them, who are familiar with applicable standards and other regulations regarding electrical engineering and, in particular, the relevant safety concepts.
- Qualified application programmers and software engineers, who are familiar with the safety concepts of automation technology and applicable standards.

2 Installation and Commissioning

2.1 Unpacking the Device

Unpack all parts carefully and check the contents for any visible damage in transit. Also check whether the shipment matches the specifications on your delivery note.

If you notice damages in transit or discrepancies, please contact us immediately.

2.2 Mounting the Device

**NOTICE: Damage**

When installing the device, leave a gap of at least 30 mm (1.181") around the device to ensure sufficient air circulation.

**NOTICE: Damage**

When the operating device is installed horizontally, please note that additional sources of heat beneath the operating device may result in heat accumulation. Make sure to allow sufficient heat dissipation!

Please observe the permissible temperature range specified in the technical data of the user manual when operating the device.

**NOTICE: Damage**

To maintain the specified degree of protection, make sure the seal is evenly seated on the installation surface and the hexagon nuts are tightened uniformly to a maximum torque of 1 Nm.

The operating device can be easily and quickly mounted from the rear of the operating device. A panel thickness of approx. 1 mm to 6 mm (0.039" to 0.236") is permitted for proper mounting.

1. Cut out the mounting rectangle from the mounting plate.
2. Drill the holes with the given diameter.
3. Remove the burrs from the cutting edges and drillings.
4. Insert the operating device from the front through the mounting cutout.
5. Fasten the operating device using M4 hexagonal nuts.

2.2.1 Front Panel Dimensions

2.2.1.1 TPE057ZCV

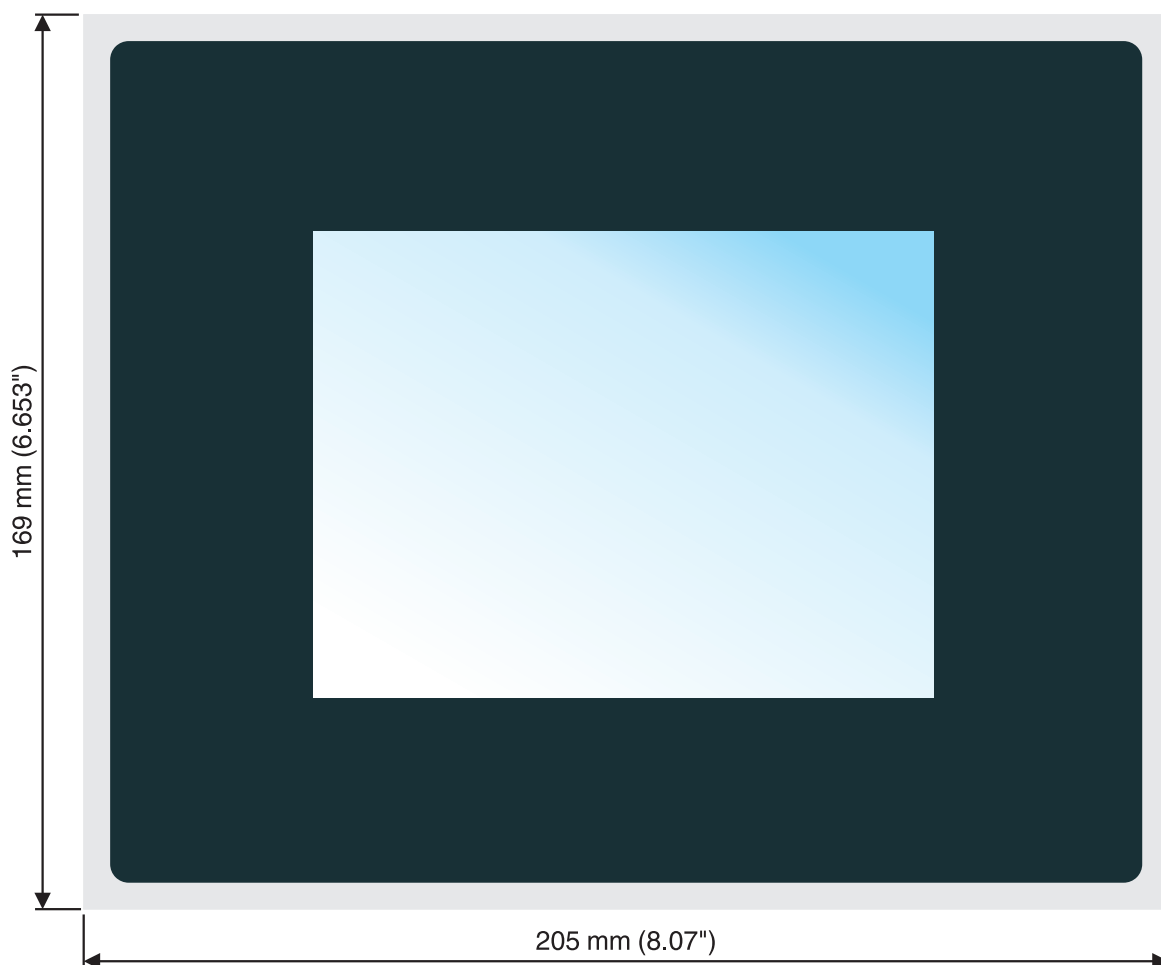


Bild 2-1 TPE057ZCV

2.2.1.2 TPE070ZCW



Bild 2-2 TPE070ZCW

2.2.2 Mounting Cutout

2.2.2.1 TPE057ZCV

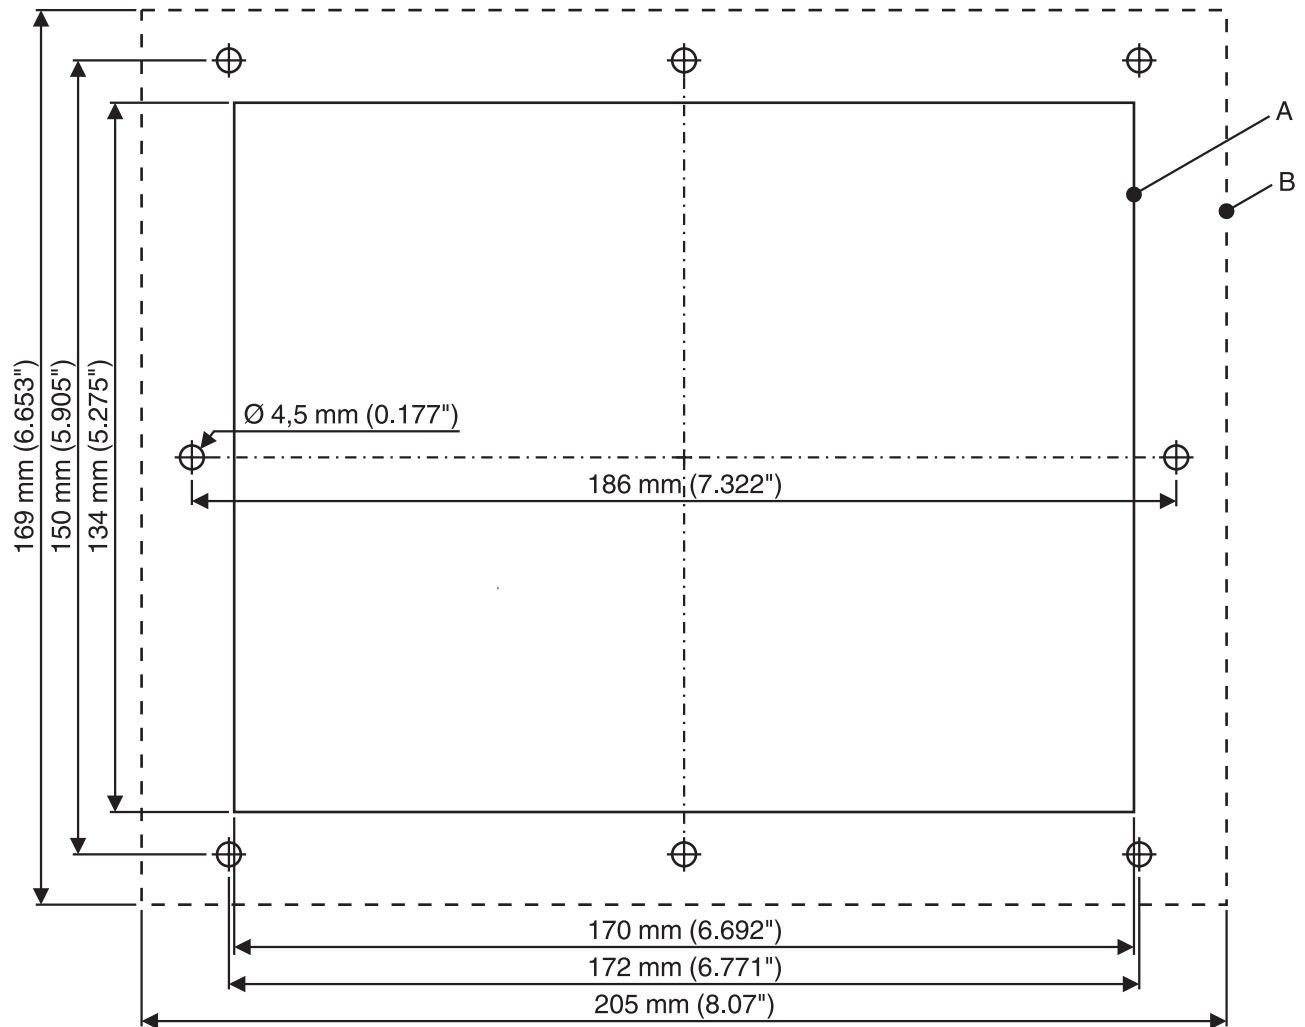


Bild 2-3 TPE057ZCV

A Mounting Cutout

B Front Panel

2.2.2.2 TPE070ZCW

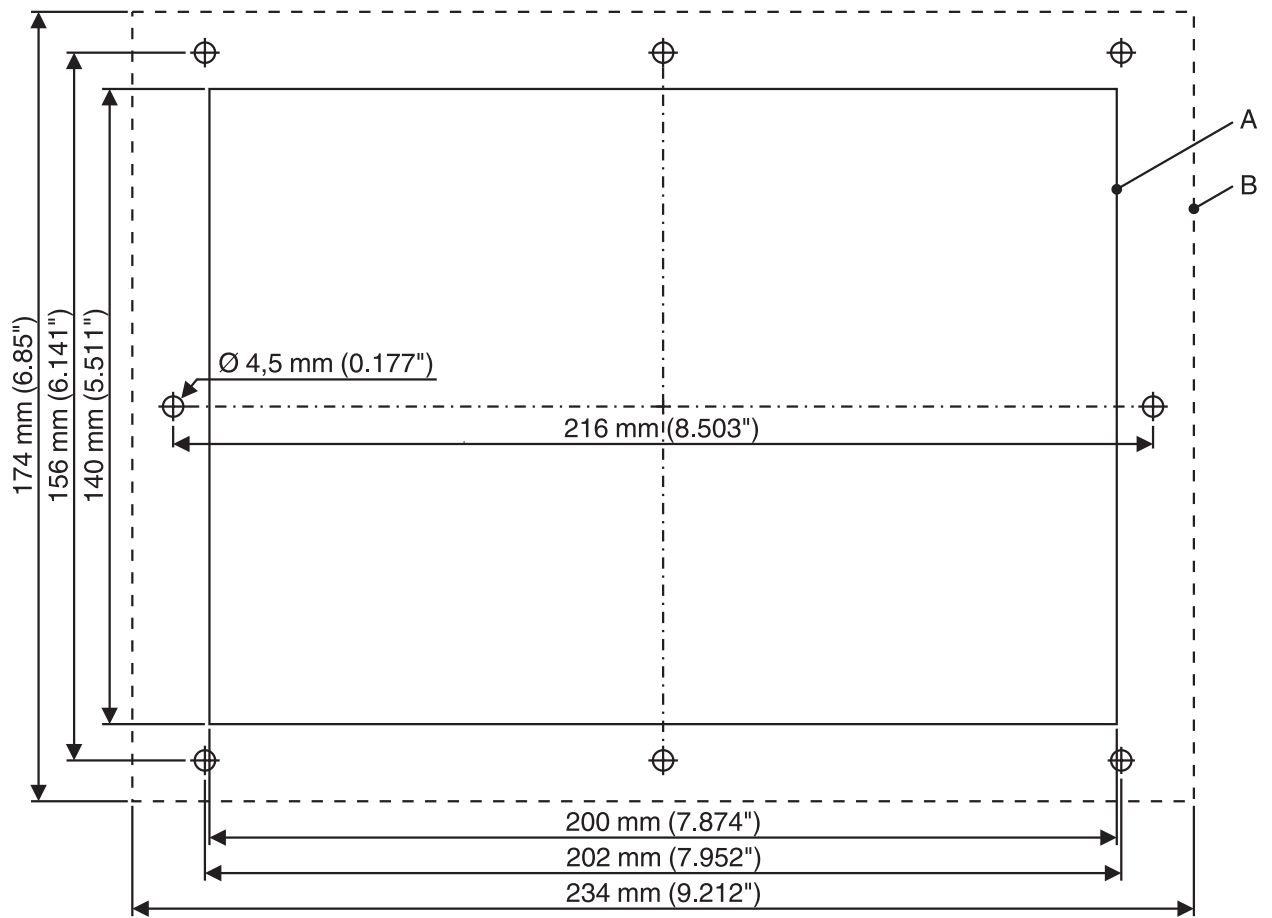


Bild 2-4 TPE070ZCW

- A Mounting Cutout
- B Front Panel

2.2.3 Side View, Mounting Depth

2.2.3.1 TPE057ZCV

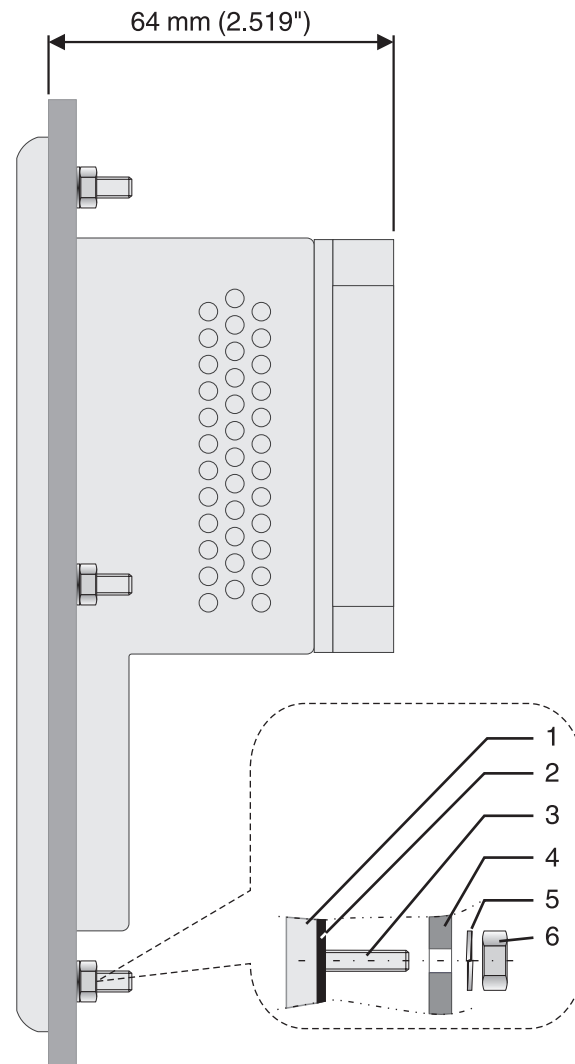


Bild 2-5 TPE057ZCV

- 1 Front Panel
- 2 Circumferential Seal
- 3 Press-in Threaded Bolt M4 x 16 mm (0.629")
- 4 Mounting Surface Thickness 1 mm to 6 mm (0.039" to 0.236")
- 5 Spring Lock Washer B4 DIN 127 Form B (not supplied)
- 6 Nut M4 DIN 934 (not supplied)

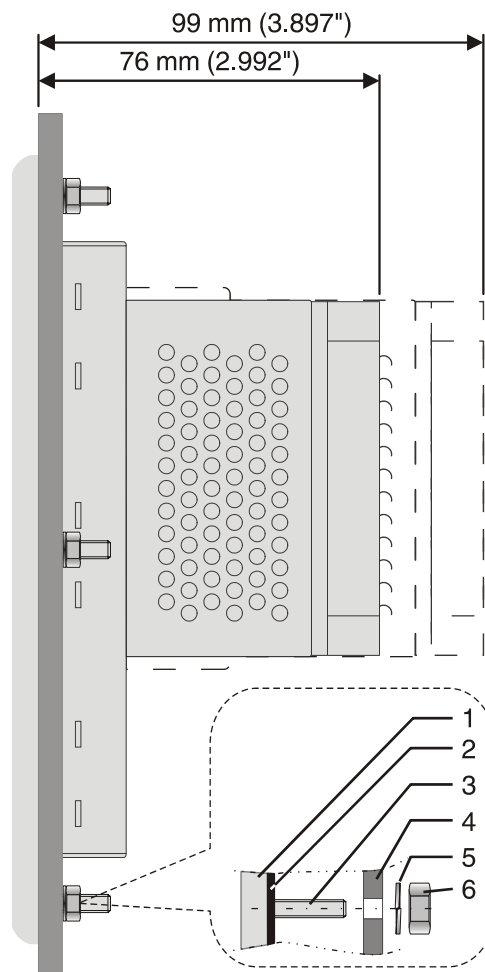
2.2.3.2 TPE070ZCW

Bild 2-6 TPE070ZCW

- 1** Front Panel
- 2** Circumferential Seal
- 3** Press-in Threaded Bolt M4 x 16 mm (0.629")
- 4** Mounting Surface Thickness 1 mm to 6 mm (0.039" to 0.236")
- 5** Spring Lock Washer B4 DIN 127 Form B (not supplied)
- 6** Nut M4 DIN 934 (not supplied)

2.3 Connecting the Device

2.3.1 Supply Voltage

The supply voltage is supplied via pin strip X1. A suitable socket strip is supplied.

Refer to the technical data for the permissible supply voltage of the operating device.



The device has reverse polarity protection. In case of wrong polarity, the device will not operate.



This is a protection class I device. For safe operation, safety extra-low voltage (SELV) in accordance with DIN EN 61131 must be used for the supply voltage.

Connector in the operating device: 3 pin pin strip

Table 2-1 Pin assignment supply voltage

Pin	Designation	Function
1		Noiseless ground / functional earth ground (FE)
2	0 V	Supply voltage 0 V (GND)
3	=== 24 V	Supply voltage === 24 V



DANGER: Hazardous voltages

Hazardous voltages can exist inside electrical installations that can pose a danger to humans. Coming in contact with live parts may result in electric shock!



NOTICE: Damage

Cables with finely stranded copper conductors with a minimum cross-section of 0.75 mm² (18 AWG) and a maximum cross-section of 2.5 mm² (14 AWG) must be used for the supply voltage.

You must adhere to the following torques at the connector:

Screw connection of terminal blocks: 0.22 Nm (minimal) to 0.25 Nm (maximum)

Screw flange: 0.3 Nm (maximum)

Use the following procedure to connect the device to the supply voltage:

1. Strip approx. 30 mm (1.181") off the outer cable sheath and approx. 5 mm (0.197") off the wires.

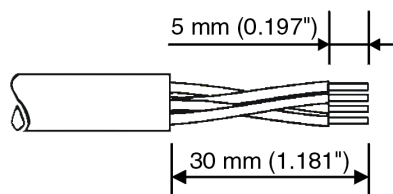


Figure 2-7 Preparing the cable

2. Fit the wires with wire end ferrules and connect the wires to the socket strip.
3. Plug the socket strip onto pin strip X1.
4. Secure the socket strip in place with a screw-type locking to prevent it from slipping out.

2.3.2 Grounding

The grounding is performed - depending on the type of device - with a slip-on sleeve (noiseless ground / functional earth ground) or a ring cable lug (protective ground).

**NOTICE: Damage**

A separate copper conductor must always be provided for the grounding. The conductor must have a minimum cross-section of 1.5 mm² (16 AWG) and must be kept as short as possible.

You must adhere to a maximum torque of 1 Nm at an protective grounding on the threaded bolt.

1. Strip approx. 5 mm (0.197") off the wires.
2. Fit the stripped wires - depending on the type of device - with a slip-on sleeve or a ring cable lug.
3. Plug the slip-on sleeve on the flat tab or mount the ring cable lug with the nut to the threaded bolt.

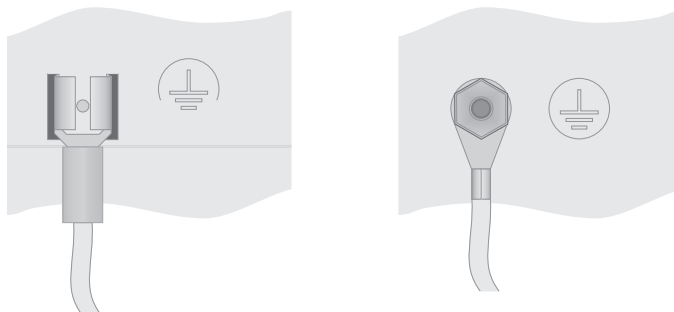


Bild 2-8 Noiseless ground / protective ground

2.4 Switching On

When switching on the operating system loads. The interface for SD/SDHC cards is available for applications and other data.

2.4.1 Cockpit

The operating device allows you - by starting the cockpit during the startup phase - to make changes to the device configuration.

Start cockpit at system startup

To start the cockpit, do the following:

1. Wait during the startup phase until the following dialog is displayed:

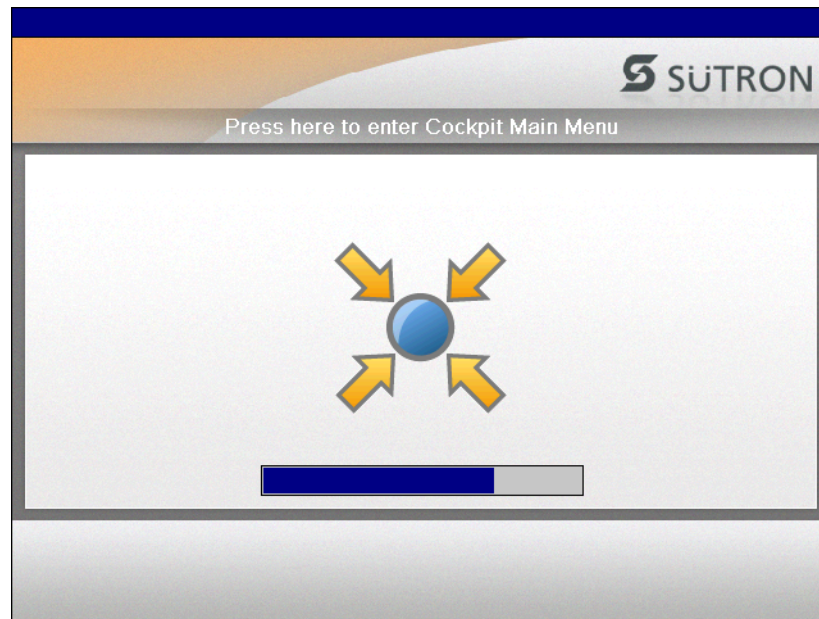


Bild 2-9 Cockpit startup phase



2. Press the button to start the cockpit before the progress bar is down.

You can customize the language of the cockpit interface at the language menu item.



3. Press the button **Language Selection**.

4. Select the desired language.



5. Confirm your selection with the green check.

Using desktop icon to start cockpit

You can start the cockpit via the desktop icon at already started operating devices with active desktop:



1. Briefly press twice on the desktop icon.



2. Press the button to start the cockpit before the progress bar is down.

You can customize the language of the cockpit interface at the language menu item.




3. Press the button **Language Selection**.

4. Select the desired language.



5. Confirm your selection with the green check.

2.4.1.1 Menu Structure

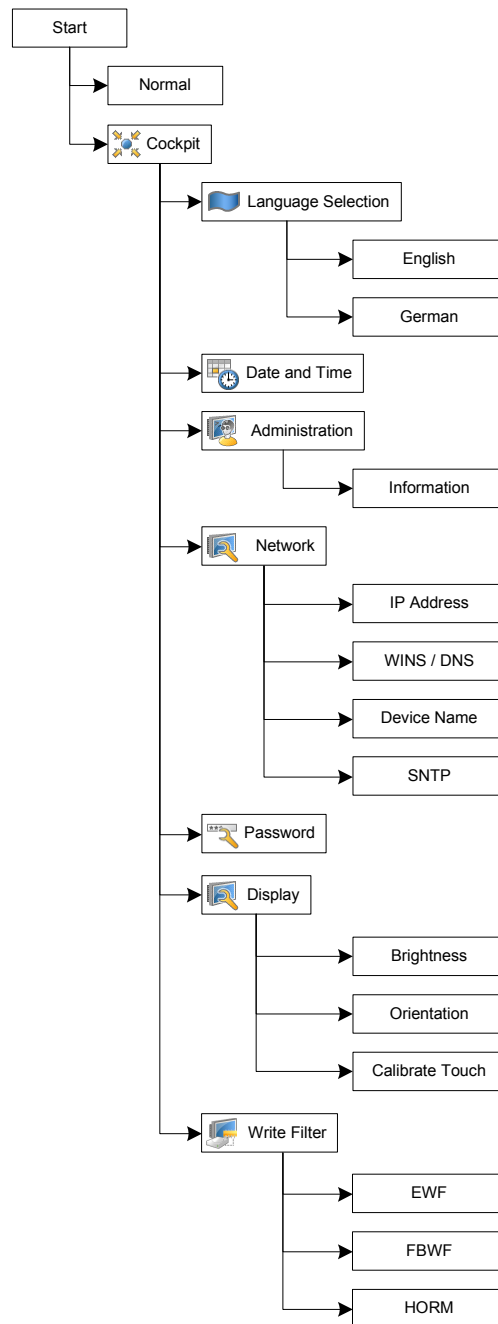

2.4.1.2 Settings and Functions



Some settings are password-protected. The default password is "+-+-.".

2.4.1.2.1 Language Selection



You can customize the language of the cockpit interface at the language menu item.

1. Select the desired language.
2. Confirm your selection with the green check.



2.4.1.2.2 Date and Time



You set up date, time and time zone via the **Date and Time** menu item.

2.4.1.2.3 Administration



The **Administration** menu shows device information.

Information

The following informations are displayed:

- Device type
- Hardware version,
- Serial number,
- Image name,
- Image date,
- Operating system.

2.4.1.2.4 Network



You can configure the network settings with the **Network** menu item.

IP Address

Use Dynamic IP (DHCP)

The network configuration is automatically obtained from the DHCP server.



Confirm your selection with the green check.

Use Static IP

Manually assign an ip address, subnet mask and gateway of the operating device.



Confirm your selection with the green check.

WINS / DNS



Optionally, enter the addresses for the WINS / DNS server.



Confirm your selection with the green check.



The input fields are only active when you set up a static ip.

- Device Name** You can define a device name with a maximum of 15 characters. Via network, the device can be accessed with the device name instead of the ip address.
- ✓ Confirm your selection with the green check.
- SNTP** Enter the address of an intranet or internet time server. Define an interval in milliseconds for time synchronization.
- ✓ Confirm your selection with the green check.
- 2.4.1.2.5 Password**
-  The menu item **Password** allows you to protect certain menu items in the cockpit with a password.
- Current password
1. Enter a password for the protected menu items.
 2. Confirm your selection with the green check.
- ✓
- Password protected
1. Select the menu items which shall get a password protection.
 2. Confirm your selection with the green check.
- ✓
- 2.4.1.2.6 Display**
-  This category offers the following functions:
- Brightness and orientation of the display
 - Calibration of the touch
- Brightness**
1. Adjust the brightness using the slider or the arrow symbols.
 2. Confirm your selection with the green check.
- ✓
- Orientation**
1. Turn the orientation using the buttons **Turn left** and **Turn right** to the desired position.
 2. Confirm your selection with the green check.
- ✓
- Depending on device type, the new orientation is accepted immediately or after a reboot of the operating device.
3. Press the **OK** button.
- Calibrate Touch**
1. Press the **Recalibrate** button.
- Depending on device type the calibration is automatically started immediately or after a reboot of the operating device.
2. Press the displayed marks to calibrate the touch.

2.4.1.2.7 Write Filter



This category offers the following functions:

- Enhanced write filter (EWF)
- File based write filter (FBWF)
- Hibernate once, resume many (HORM)

EWF

The enhanced write filter (EWF) protects your system from write access and instead writes the data to the main memory.



NOTICE

With enabled write protection, all data in the main memory of the operating device are lost after a restart.

Enable EWF

1. Press the **Enable EWF** button.



2. Confirm your selection with the green check.
3. Restart the operating device for the changes to take effect.

Disable EWF

1. Press the **Disable EWF** button.



2. Confirm your selection with the green check.
3. Restart the operating device for the changes to take effect.

FBWF

The file based write filter (FBWF) protects your system from write access and instead writes the data to the main memory. The selected folders are not protected.



NOTICE

With enabled write protection, all data in the main memory of the operating device are lost after a restart.

Enable FBWF

1. Press the **Enable FBWF** button.



2. Confirm your selection with the green check.
3. Restart the operating device for the changes to take effect.

Disable FBWF

1. Press the **Disable FBWF** button.



2. Confirm your selection with the green check.
3. Restart the operating device for the changes to take effect.

Exclude Folders

1. Select the folders that should be not write protected.
2. Press the **Exclude Folders** button.



3. Confirm your selection with the green check.
4. Restart the operating device for the changes to take effect.

HORM

The current state of the system can be saved and restored automatically at every startup. The boot process is accelerated by this function.

Enable HORM

To use HORM, EWF must be active.

1. Press the **Enable HORM** button.
2. Press the **Hibernate System** button to save the current state.

Disable HORM

1. Press the **Disable HORM** button.
2. Confirm your selection with the green check.
3. Restart the operating device for the changes to take effect.

Hibernate System

1. Press the **Hibernate System** button.

The operating device is set to hibernation. Thereby the current state of the system is saved and restored automatically at every startup.

2.5 Identification

The operating device can be identified using the nameplate on the rear of the device.

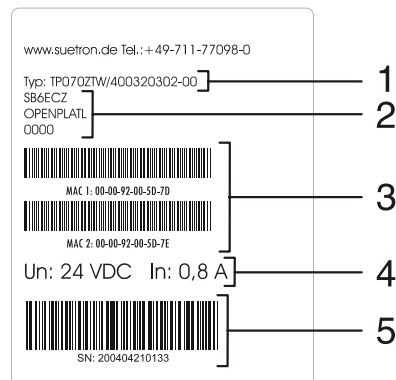


Bild 2-10 Nameplate (example)

- 1 Device Type
- 2 Software Version (Version on Delivery)
- 3 MAC Addresses
- 4 Voltage and Current
- 5 Serial Number

3 Control and Display Elements

3.1 Display

**DANGER: Toxic**

If the display is damaged, avoid touching, swallowing or breathing in the liquids or gases which may leak out!

**DANGER: Corrosive**

If the display is damaged, avoid touching, swallowing or breathing in the liquids or gases which may leak out!



Pixel failures, which can occur with TFT displays, are due to production and no complaint reason!

3.1.1 Touchscreen

The device is equipped with a capacitive touch screen. This touch screen is different in the operation of a resistive touch screen:

- The capacitive touch screen reacts to touch and not to pressure like the resistive touch
- The operation of the capacitive touch screen is carried out exclusively with the fingertips
- Conventional touch pins and gloves are not suitable for the operation

4 Interfaces of the Device

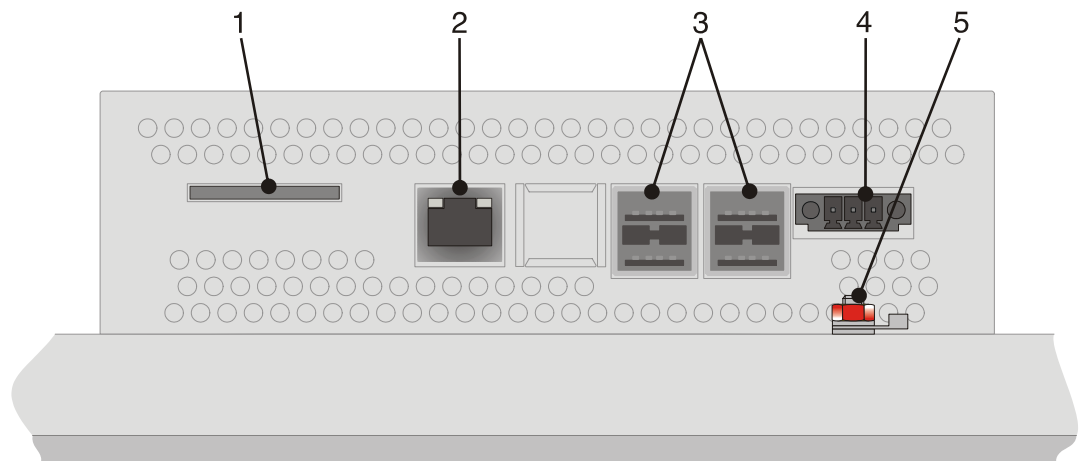


Bild 4-1 Rear view

- 1 Slot for SD / SDHC Memory Card
- 2 Ethernet X7 (10/100/1000 MBit)
- 3 Female Connector X2 - X5 (USB Host - Type A)
- 4 Supply Voltage
- 5 Threaded Bolt For Protective Grounding

4.1 Ethernet

10/100/1000 Base-T Ethernet interfaces are available at the operating device.

4.1.1 Pin Assignment

Connector in the operating device: RJ45 female connector.

Tabelle 4-1 Pin assignment of the Ethernet interface

Pin	Designation	Function
1	D1+	Data Line 1, Positive Polarity
2	D1-	Data Line 1, Negative Polarity
3	D2+	Data Line 2, Positive Polarity
4	D3+	Data Line 3, Positive Polarity
5	D3-	Data Line 3, Negative Polarity
6	D2-	Data Line 2, Negative Polarity
7	D4+	Data Line 4, Positive Polarity
8	D4-	Data Line 4, Negative Polarity

4.1.2 Cable

**ACHTUNG**

Use a twisted pair cable of category 5 or 6 (CAT 5 or 6). Use twisted pair cable of category 6 for optimal transfer rate at 1000 Base-T. The maximum cable length is 100 m (328.084 feet).



See the IEEE 802.3 standard for further information.

4.1.3 Diagnosis

Ethernet diagnostics LEDs are located at the ethernet interface of the operating device.

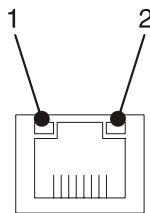


Bild 4-2 Arrangement of the Ethernet diagnostics LEDs

Tabelle 4-2 Function of Ethernet diagnostics LEDs

No.	Color	State	Function
1	Yellow	Flashing	Sending / Receiving activity 100/1000 MBit
	Green	Flashing	Sending / Receiving activity 10 MBit
2	Yellow	On	1000 MBit
	Green	On	100 MBit
	-	Off	10 MBit

4.2 USB

USB interfaces are available at the operating device to connect periphery equipment (for example: Mass memory, printer, scanner, mouse, keyboard etc.).



NOTICE

Using hardware not suitable for industrial use (e.g. keyboard, mouse, memory card) may decrease safety of operation. This includes hardware intended for home and office use.

4.2.1 Cable



For the specification of a suitable cable, please refer to the „Universal Serial Bus Specification Rev. 2.0“.



NOTICE

Use industrial-suited USB cables with a length of maximally 2.5 m (8.202 feet).

4.3 Serial Interfaces

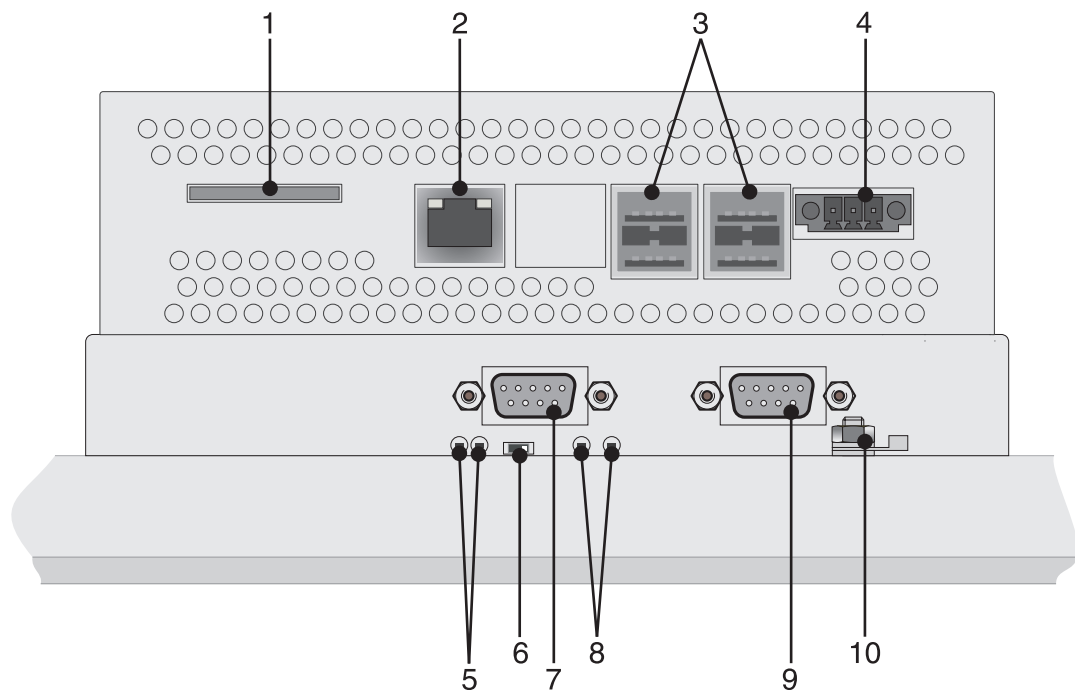


Bild 4-3 Rear view RS-422 / RS-485, RS-232

- 1 Slot for SD / SDHC Memory Card
- 2 Ethernet X7 (10/100/1000 MBit)
- 3 Female Connector X2 - X5 (USB Host - Type A)
- 4 Supply Voltage
- 5 Diagnostics LEDs (RS-422/RS-485)
- 6 Termination Switch (RS-422/RS-485)
- 7 Male Connector X14 (RS-422/RS-485)
- 8 Diagnostics LEDs (RS-232)
- 9 Male Connector X15 (RS-232)
- 10 Threaded Bolt For Protective Grounding

4.3.1 RS-422 / RS-485 (X14)

The interface standard RS-422 / RS-485 is suitable for point-to-point and multi-point connections.

The wires belonging together are marked with „A“ and „B“. Some descriptions refer to the pins with „-“ and „+“, where A = - and B = +.

Signal Logic 1 $U_A - U_B \leq -0.3 \text{ V i.e. } (U_A < U_B)$

Signal Logic 0 $U_A - U_B \geq +0.3 \text{ V i.e. } (U_A > U_B)$

The interface is assigned to the port COM4. At an image version before 181 and operating system Windows CE 6.0 the port COM1 is assigned.

4.3.1.1 Pin Assignment

 


Bild 4-4 9 pin D-SUB male connector strip

Connector in the operating device: 9 pin D-SUB male connector strip.

Tabelle 4-3 Pin assignment RS-422/RS-485

Pin	Designation	Function		
1	SGND	Signal Ground		
2	T(B)	Transmitted Data	+	P
3	T(A)	Transmitted Data	-	N
4	R(A)	Received Data	-	N
5	R(B)	Received Data	+	P
6	nc	Not Connected		
7	nc	Not Connected		
8	nc	Not Connected		
9	nc	Not Connected		



NOTICE

The D-SUB connector strips must be shielded sufficiently. See chapter “Shielding D-SUB Connectors” on page 38.

4.3.1.2 Termination

Always turn on the termination in a 4-wire point-to-point connection (RS-422 / RS-485). A sender termination for the quiescent level of the receiver must exist on the remote station.

Turn on the termination only at the two ends of the lines in a 2- or 4-wire multi-point connection (RS-422 / RS-485).

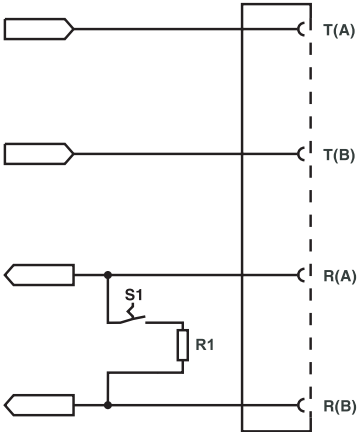


Bild 4-5 Termination possibilities RS-422 / RS-485 (intern)

Tabelle 4-4 Resistance values termination RS-422 / RS-485

Designation	Value
R1	120 Ohm



The switch positions for ON or OFF are printed onto the operating device. Only the specified switch positions are allowed.

Tabelle 4-5 Termination switch RS-422 / RS-485

Switch position	Function
ON	Receiver termination (120 Ohm)
OFF	No receiver termination

4.3.1.3 Transmitter Control

Switching between half-duplex and full-duplex is carried out by the DTR signal.

Full-duplex (DTR inactive / off):

The transmitter is always active and is not turned off on intermissions.

The receiver is always active.

Full-duplex (DTR active / on):

The transmitter is activated during the transmission. On intermissions, the transmitter is highly resistive.

The receiver is disabled during the transmission. The operating device does not receive the own transmit data at the receiver.

4.3.1.4 Diagnosis

Diagnostics LEDs are located on the rear of the operating device.

The diagnostic LEDs at the operating device have the following functions:

Tabelle 4-6 Functions of the RS-422 / RS-485 diagnostics LEDs

Designation	Color	State	Function
Rx	Green	Flashes	Data transfer active
Tx	Yellow	Flashes	Data transfer active

4.3.2 RS232 (X15)

The serial RS-232 interface is suitable to establish a point-to-point connection. The interface is assigned to the port COM3. At an image version before 181 and operating system Windows CE 6.0 the port COM0 is assigned.

4.3.2.1 Pin Assignment

 


Bild 4-6 9 pin D-SUB male connector strip

Connector in the operating device: 9 pin D-SUB male connector strip.

Tabelle 4-7 Pin assignment RS-232

Pin	Designation	Function
1	nc	Not Connected
2	RD	Received Data
3	TD	Transmitted Data
4	nc	Not Connected
5	GND	Ground
6	nc	Not Connected
7	RTS	Request to Send
8	CTS	Clear to Send
9	nc	Not Connected



NOTICE
The D-SUB connector strips must be shielded sufficiently. See chapter “Shielding D-SUB Connectors” on page 38.

4.3.2.2 Diagnosis

Diagnostics LEDs are located on the rear of the operating device.

The diagnostic LEDs at the operating device have the following functions:

Tabelle 4-8 Functions of the RS-232 diagnostics LEDs

Designation	Color	State	Function
RD	Green	Flashes	Data transfer active
TD	Yellow	Flashes	Data transfer active

4.4 Field Bus Interfaces

4.4.1 CAN (X12, X13)

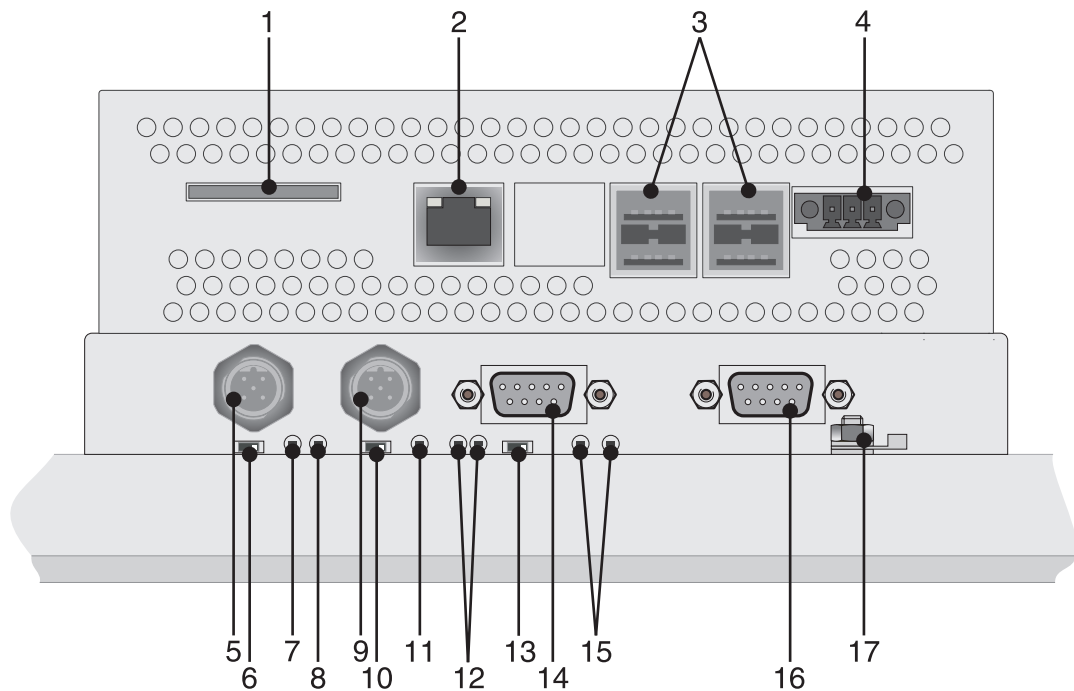


Bild 4-7 Rear view CAN

- 1** Slot for SD / SDHC Memory Card
- 2** Ethernet X7 (10/100/1000 MBit)
- 3** Female Connector X2 - X5 (USB Host - Type A)
- 4** Supply Voltage
- 5** Male Connector X12 (CAN1)
- 6** Termination Switch (CAN1)
- 7** Diagnostics LEDs (CAN1)
- 8** Diagnostics LEDs (Microcontroller)
- 9** Male Connector X13 (CAN2)
- 10** Termination Switch (CAN2)
- 11** Diagnostics LEDs (CAN2)
- 12** Diagnostics LEDs (RS-422/RS-485)
- 13** Termination Switch (RS-422/RS-485)
- 14** Male Connector X14 (RS-422/RS-485)
- 15** Diagnostics LEDs (RS-232)
- 16** Male Connector X15 (RS-232)
- 17** Threaded Bolt For Protective Grounding

4.4.1.1 Pin Assignment



Bild 4-8 5 pin M12 male connector

Connector in the operating device: 5 pin M12 male connector.

Tabelle 4-9 Pin assignment CAN 1

Pin	Designation	Function
1	PE	Shielding
2	Reserved	Reserved for DeviceNet
3	CAN1_GND	CAN Ground
4	CAN1_H	CAN_H Bus Line
5	CAN1_L	CAN_L Bus Line

Tabelle 4-10 Pin assignment CAN 2

Pin	Designation	Function
1	PE	Shielding
2	Reserved	Reserved for DeviceNet
3	CAN2_GND	CAN Ground
4	CAN2_H	CAN_H Bus Line
5	CAN2_L	CAN_L Bus Line



NOTICE

The M12 connectors must be connected to the cable shield.

4.4.1.2 Cable



NOTICE

A shielded twisted-pair cable complying with ISO 11898-2 must be used.



A suitable cable with the designation „SAC-5P- 2,0-920/FS SCO“ is offered by Phoenix Contact GmbH with article number 1518216.

The maximum cable length depends on the data transfer rate used.

Tabelle 4-11 Bit rate CAN

Bit rate	Cable length
125 kBit/s	500 m
500 kBit/s	100 m
1 MBit/s	40 m

4.4.1.3 Termination

Sie müssen den CAN-Bus an beiden Enden mit Terminationswiderständen (120 Ohm) abschließen.



Die Orientierung für die Schalterstellung ON oder OFF ist auf dem Bediengerät aufgedruckt. Nur die angegebenen Schalterstellungen sind erlaubt.

Tabelle 4-12 Terminationsschalter CAN

Schalterstellung	Funktion
ON	Termination (120 Ohm)
OFF	Keine Termination

4.4.1.4 Diagnosis

Diagnostics LEDs are located on the rear of the operating device. The LEDs show the states of the bus system.

The diagnostics LEDs at the operating device have the following functions:

Tabelle 4-13 Functions of the CAN diagnostics LEDs

Designation	Color	State	Function
CAN1	Green	On	Node is operational
	Green	Flashes	Node is not operational
CAN2	Green	Ein	Node is operational
	Green	Flashes	Node is not operational
µC	Green	Off	Microcontroller inactive
	Green	Flashes slowly	Microcontroller is operational
	Green	Flashes slowly and fast	Microcontroller is operational Requests of the host CPU are received and processed

4.5 Memory Card

At the underside of the operating device you can plug in an SD card.

**NOTICE**

Using hardware not suitable for industrial use (e.g. keyboard, mouse, memory card) may decrease safety of operation. This includes hardware intended for home and office use.

4.5.1 Inserting the memory card

If you insert the memory card, the back side (side with contacts) of the memory card must be visible. Insert the memory card until it clicks.

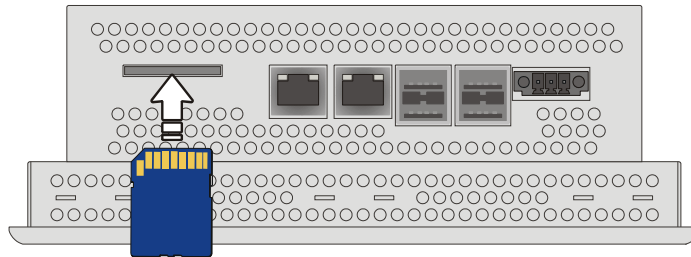


Bild 4-9 Inserting the memory card

4.5.2 Ejecting the memory card

To remove, push the memory card into the operating device until it clicks. The memory card bounces when released automatically out of the operating device. Now you can remove the memory card.

4.6 Shielding D-SUB Connectors

You must shield D-SUB connectors as follows:

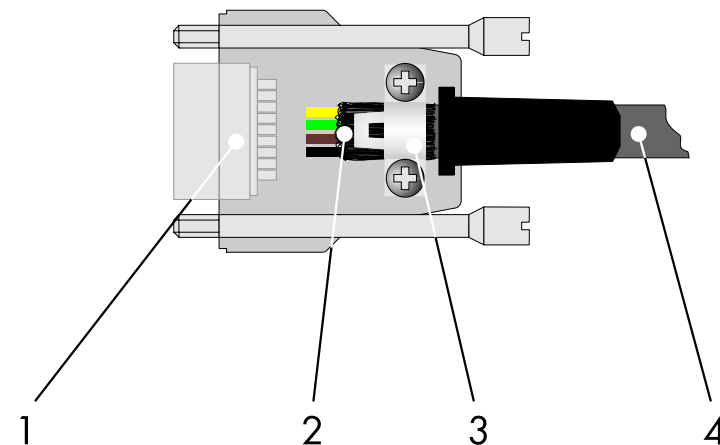


Bild 4-10 Shielding D-SUB connectors

- 1 D-SUB connector
- 2 Shield
- 3 Cable clip
- 4 Cable

The shield must be folded back into a flat position over the cable sheath.

When fastening the cable with the cable clip, as much of the shielding as possible must be in contact with the housing and sufficient strain relieve must be ensured.

5 Maintenance and Servicing

5.1 Maintenance Interval

The following maintenance intervals are recommended for this operating device:

Tabelle 5-1 Maintenance interval

Maintenance work	Interval
Changing the Battery	4 Years

5.2 Front Panel

Only use a damp cloth to remove any dirt from the front panel.

5.3 Fuse

**NOTICE: Damage**

The semiconductor fuse cannot be replaced!

A semiconductor fuse is used to protect the device. Once the fuse has been tripped, the device must be disconnected from the supply voltage to allow the semiconductor fuse to regenerate. At an ambient temperature of 20 °C (68 °F), the regeneration takes approximately 20 seconds. The higher the ambient temperature, the longer the regeneration takes.

5.4 Battery

The minimum battery life is 5 years, even under unfavorable operating conditions.

We recommend you change the battery approximately every 4 years as part of the regular maintenance work.

5.4.1 Changing the Battery

**NOTICE: Damage**

Batteries must only be changed by authorized and trained experts!

**NOTICE: Damage**

Electrostatic discharge can damage electronic components. Observe the ESD protective measures!

**CAUTION: Explosive**

Do not throw lithium batteries into fire, do not heat to 100 °C or higher and do not recharge.

**CAUTION: Toxic**

Do not open lithium batteries.

After a battery change, you must set the date and time newly!

1. Remove the connector of the supply voltage.
2. Remove the screws with the help of a screwdriver (see picture).
3. Remove the enclosure.
4. Disconnect the connector from the battery and remove the dead battery.
5. Plug in the cable of the new battery.
6. Use a provided glue strip to attach the new battery.
7. Place the enclosure cover back onto the device,
8. Carefully tighten the screws of the enclosure cover.



Take care at the assembly of the enclosure cover that all enclosure latches click into the corresponding slits of the underlying enclosure.

9. Put the connector for the supply voltage on again.
10. Set the current date and time.


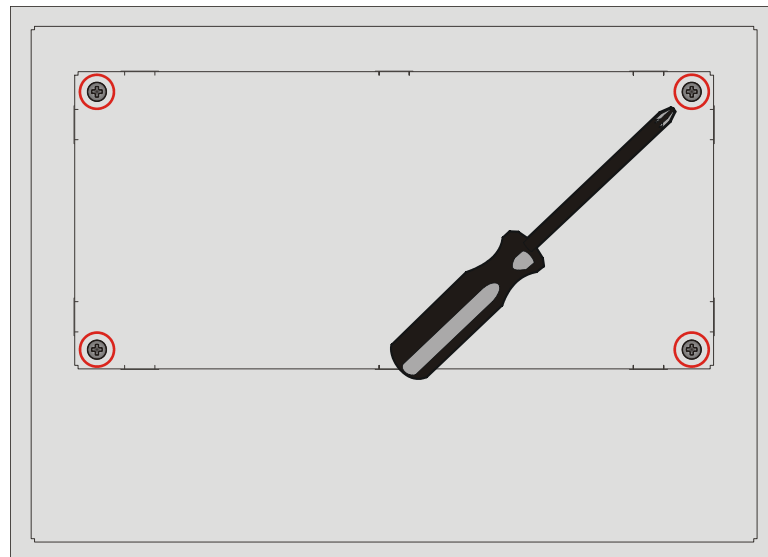


Bild 5-1 Enclosure screws at the operating device

 5.4.2 Battery Disposal



The manufacturer is obliged to mark batteries with this symbol before first placing into market. The symbol is extended by the chemical symbols if the following limiting values are exceeded:

More than 0.0005 mass percent mercury	Hg
More than 0.002 mass percent cadmium	Cd
More than 0.004 mass percent lead	Pb

Batteries can be given back free of charge after use at the place of purchase.

According to the §11 of the battery law, final consumers are obliged to give old batteries back to gathering points which attached to the common take back system or manufacturer-specific take back systems.

**NOTICE: Damage**

To prevent short circuitry in the collection boxes, insulate the poles of each battery with insulation tape or put each single battery into a plastic bag.

6 Technical Data

6.1 Allgemein

Touch Screen	
Type	Projected capacitive
Operation	With the finger

Ethernet	
Ethernet	10/100/1000 Mbit/s

USB	
In accordance with the „Universal Serial Bus Specification Rev. 2.0“	
Min.: 1.5 Mbit/s Max.: 12 Mbit/s Max. output current: 100 mA per output	

Field Bus Interfaces	
Variable baud rates and data formats	
X12 / X13 CAN	In accordance with ISO 11898 Galvanically Isolated

Serial Interfaces	
Variable baud rates and data formats	
X14 RS-422 / RS-485	In accordance with DIN 66259-4 Transmission length: 0 - 1200 m, twisted pair wire, shielded, galvanically isolated
X15 RS-232	In accordance with DIN 66259 T1, CCITT V.28 Transmission length: 0 - 15 m, conductors layered in strands, shielded, galvanically isolated

Central Processing Unit	
Central processing unit	Intel® Atom™
Clock frequency	1.1 GHz / 1.33 GHz

Memory	
DDR	512 MByte / 1 GByte
Flash	2 GByte / 8 GByte
SD/SDHC interface	2 GByte / 32 GByte maximum

Connection System	
Female and male connector strips Phoenix MINI-COMBICON, 3 pin	
RJ45 female connector	
USB female connector A	

Environmental Conditions	
Temperature during operation	- 20 °C to + 60 °C (- 4 °F to + 158 °F) - 20 °C to + 55 °C (- 4 °F to + 131 °F) - (for applications according to UL 508)
Temperature during storage, transport	- 30 °C to + 80 °C (- 22 °F to + 176 °F)
Relative air humidity for operation and storage	Front: 5 % to 95 % Rear: 20 % to 85 %, no condensation
Operating altitude (above sea level)	0 m to 4000 m
Application area	Degree of pollution 2, overvoltage category III

Standards and Guidelines	
Interference immunity	EN 61000-4-2 EN 61000-4-3 EN 61000-4-4 EN 61000-4-5 EN 61000-4-6 EN 61000-6-2
Emitted interference	EN 61000-6-4 EN 50011 limit class value A EN 50022 limit class value A
Equipment requirements	EN 61131
Storage and transportation	EN 61131 part 2
Power supply	EN 61131 part 2
Electromagnetic compatibility	2004/108/EG
Degree of protection	EN 60529
Impact load, shocks	EN 60068 part 2-27
Sinusoidal vibrations	EN 60068 part 2-6
Corrosion protection	IEC 60068


NOTICE: Radio Interference

This is a class A device. This device may cause radio interference in residential areas. In this case, the user may be required to introduce appropriate counter-measures, and to bear the cost of same.

Approvals

CE, UL, cUL

**NOTICE**

For applications according to UL 508 the maximum temperature during operation is 55 °C (131 °F).

6.2 TPE057ZCV

Display	
Size (diagonal) in cm (inch)	14.48 (5.7)
Type	TFT (color)
Resolution (pixels)	640 x 480
Colors	262144
Reading angle (vertical / horizontal)	107° / 130°
Half-life backlighting	40,000 h
Brightness in cd/m ²	400
Display area (H x W) in mm (Inch)	86.4 x 115.2 (3.402 x 4.535)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Power consumption (typical at 24 V)	0.5 A
Connected load	12 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	169 x 205 x 6 (6.614 x 8.07 x 0.236)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	134 x 170 (5.275 x 6.692)
Mounting depth in mm (Inch)	About 64 (2.519)
Degree of protection	Front: IP67 Rear: IP20
Total weight	About 1100 g

6.3 TPE070ZCW

Display	
Size (diagonal) in cm (inch)	17.78 (7)
Type	TFT (color)
Resolution (pixels)	800 x 480
Colors	262144
Reading angle (vertical / horizontal)	130° / 140°
Half-life backlighting	40,000 h
Brightness in cd/m ²	350
Display area (H x W) in mm (Inch)	91.4 x 152.4 (3.598 x 6.0)

Electrical Data	
Supply voltage	24 V DC (SELV / PELV in accordance with DIN EN 61131)
Residual ripple	10 % maximum
Power consumption (typical at 24 V)	0.7 A
Connected load	16.8 W
Fuse	Semiconductor fuse, self-resetting
Protection against polarity reversal	Integrated

Front Panel and Enclosure	
Enclosure	Steel sheet, galvanized
Front panel material	Aluminium, brushed, anodized natural finish
Front panel (H x W x D) in mm (Inch)	174 x 234 x 6 (6.85 x 9.212 x 0.236)
Seal	Circumferential rubber seal on the rear
Mounting cutout (H x W) in mm (Inch)	140 x 200 (5.511 x 7.874)
Mounting depth in mm (Inch) - (standard / field bus)	About 76 / 99 (2.992 / 3.897)
Degree of protection	Front: IP67 Rear: IP20
Total weight	About 1200 g

7 Ordering Data

Tabelle 7-1 Accessories

Description	Article No.
USB 2.0 stick 1 GB	81152.100
USB 2.0 stick 2 GB	81152.200
USB 2.0 stick 8 GB	81152.800
Battery, assembled with cable and connector (Type: CR2450)	66779.100
Protective foil for touch screen 5,7" (Set with 10 protective foils, scraper and instructions)	81251.056
Protective foil for touch screen 7" (Set with 10 protective foils, scraper and instructions)	81251.070

A Index

A

Accessories	49
Administration	18

B

Battery	39
Battery disposal	41

C

Cable	
CAN	36
Ethernet	26
USB	27
Changing the battery	40
Cockpit	
Structure	17
Connecting	14

D

Date	18
Diagnosis	
CAN	36
RS-232	33
RS-422	31
RS-485	31
Dimensions	
Cutout	10
Front panel	8
Display	19, 23

E

Ethernet	26
----------------	----

F

Functions	18
Fuse	39

I

Identification	22
Intended use	6
Interface	
CAN	34
RS-232	32
RS-422	29
RS-485	29
USB	27

M

Maintenance	39
Maintenance interval	39
Memory card	37
Mounting	7

N

Nameplate	22
Network	18

O

Ordering data	49
---------------------	----

P

Password	19
Pin assignment	
CAN	35
Ethernet	26
RS-232	32
RS-422	29
RS-485	29

R

Rear view	
CAN	34
RS-422 / RS-485, RS-232	28

S

Safety notes	5
Servicing	39
Settings	18
Standards	44
Structure	
Cockpit	17
Supply Voltage	14
Switching on	16

T

Target group	6
Technical data	43
Termination	
CAN	36
RS-485	30
Time	18
Touchscreen	23

U

Unpacking	7
-----------------	---

V

Version	22
---------------	----

SÜTRON electronic GmbH

Kurze Straße 29

D-70794 Filderstadt

Phone: 0049 711 / 77098-0

Fax: 0049 711 / 77098-305

E-Mail: doku@suetron.de

Internet: www.suetron.com